




Part Number	D350-600-145	Box Part Number MBX104 Dimension 44" x 33.5" x 6"
Description	Spacepod Door Assembly LH	Other Packaging MF3433 MF4631F  (1) sheet of styrofoam
	Door Addemary Err	Logo Decals D3567-1

## **Packaging Instructions and Decal Placement**

## D350-600-145

Apply Dart tape to cover box. Put styrofoam all around the box and on the bottom. Put in the door face down. Tape the keys to the paperwork and put into box. Take (2) pieces of MF3433 and cut about 1/2" off one end. Put them on top of the door so that there is no movement. Take (1) piece of MF4631F and place it at the biggest corner so the door doesn't move. Put scrunched up foam on the top for protection. Close box. Strap (3) times and staple. Apply clear tape to straps. Apply D2729-3 label as per QSI 014 section 4.5

## D2729-1

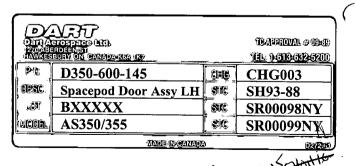

Revision: A B C 09.09.10 Date: 04.10.28 07.01.12

H:\Admin-qa\iso\forms\PPP-1.Rev.A

D2729-3



## **Dart Aerospace Ltd.**

1270 Aberdeen Street Hawkesbury, ON K6A 1K7 CANADA

TEL.: 1 613 632-5200

SPACEPOD DOOR ASSY LH

P//N: D350-600-145 CHG003

B/N: BXXXXX